



EJECTING / INSTALLING CO2 CARTRIDGE

- 1. Press ejection button on the Blowback Laster Trainer™ to eject the magazine.
- 2. Once magazine is ejected, remove the rubber cap from the bottom of magazine.
- 3. Using the wrench provided, turn the screw counter clockwise to expose cartridge opening. Insert new 12g CO2 cartridge with small neck of cartridge pointing upward into opening of magazine place screw over inserted cartridge and turn clockwise until you feel it pierce the cartridge (screw goes in at an angle, same as magazine).
- 4. Once the screw is tightened, place rubber cap over the bottom of the magazine and re-insert the magazine back into the Blowback Laser Trainer[™] (see more detailed instructions included in the carry case, or the help section of our website).

MAGAZINE, BATTERY AND CHARGER

Your Blowback Laser Trainer[™] has a removable magazine and is equipped with a mini USB charging port that is located at the bottom of the magazine under the rubber cover.

- 1. Remove magazine from the Blowback Laser Trainer™.
- 2. Remove rubber cover.
- 3. Plug mini-USB cord into bottom of the magazine, Plug mini-USB cord into bottom of the magazine and one of the following things will occur. A. Flashing light indicates magazine needs to be charged B. Solid light indicates magazine is charging and C. Light off indicates the magazine is fully charged. Allow 8 hours to fully charge battery.
- 4. A fully charged battery will deliver approximately 5 hours of operation.
- Once your battery is charged, unplug and place rubber cap over the magazine and re-insert magazine into Blowback Laser Trainer™.

BLOWBACK LASER TARGET

Turn the off/ on switch located on the right hand side of the Blowback Laser Target upward to the on position.

The target has 2 modes of operation: **Timed and Score**. The mode switch is located at the bottom left hand front of the target.

1) **Timed Mode:** The LED at bottom of target will start a countdown from 10 to 0, this countdown prepares shooter for a timed round. When the countdown clock reaches 3 the blue shoot light will begin to flash giving the shooter a 3 second warning before the round begins. Once round begins the shooter has 10 seconds to accumulate highest possible score. When the 10-second round is completed the total score will flash on LED screen. To reset and play another round, shoot laser at the reset screen located at the bottom left hand front of the target and a new round will start.

2) **Score Mode:** Switch game button to Score Mode blue light will appear. The shooter has 13 shots to accumulate scoring points. Once the 13 shots have been completed the LED will flash the total score. To reset and play another round, shoot laser at the reset button located at the bottom left hand front of the target and a new round will start.

Charging your Blowback Laser Target

Your target is equipped with a Mini-USB charging port located under the on/off switch. Allow 12 hours to fully charge target. Plug the USB cord into the target and a yellow light will illuminate until fully charged. A fully charged battery will deliver approximately 72 hours of use.

BLOWBACK LASER TARGET PRODUCT FEATURES



WARRANTY / MAINTENANCE / SERVICE

Your Blowback Laser Trainer™ requires special tools and fixtures to repair it. Any disassembly or modification not performed by Blowback Laser Trainer technicians will void any warranty.

90 Day Limited Warranty

This product is warranted for 90 days from the date of purchase against defects in material and workmanship and the warranty is not transferable.

What is Covered?

Replacement parts and labor.

What is Not Covered?

Return shipping charges to Blowback Laser Trainer are the responsibility of the customer.

Warranty Claims

Warranty claims and repairs can only be addressed on our website, www.blowbacklasertrainer.com, and filling out a return authorization form. If it is determined a return is necessary, you will be issued a return authorization number Return the product along with your return authorization number to Rustbelt Industries LLC, P.O. Box 93062 - 1150, Simi Valley, CA 96062- 1150.

Maintenance

- 1. To keep the Blowback Laser Trainer[™] properly lubricated, it is recommended to place one drop of synthetic oil into the air hole at the top of the magazine after every 1,000 shots.
- To ensure the pinch valve located inside magazine stays lubricated, place one drop of synthetic motor oil on the top of the CO2 cartridge every ten cartridges.

Service

Do not return defective or damaged product to the dealer. If your Blowback Laser product needs repair, visit our website www.blowbacklsaertrainer.com and go to the Company section, select the Warranty tab and fill out the return authorization form. The components of the Blowback Laser Trainer products are engineered and manufactured to deliver optimum performance, any modifications or tampering with the Blowback Laser Trainer[™] may cause malfunction, void your warranty and may make it unsafe to use.